


SOLITHERM PELTIER TG-3/6XXXX303 Condensate Tray Installation

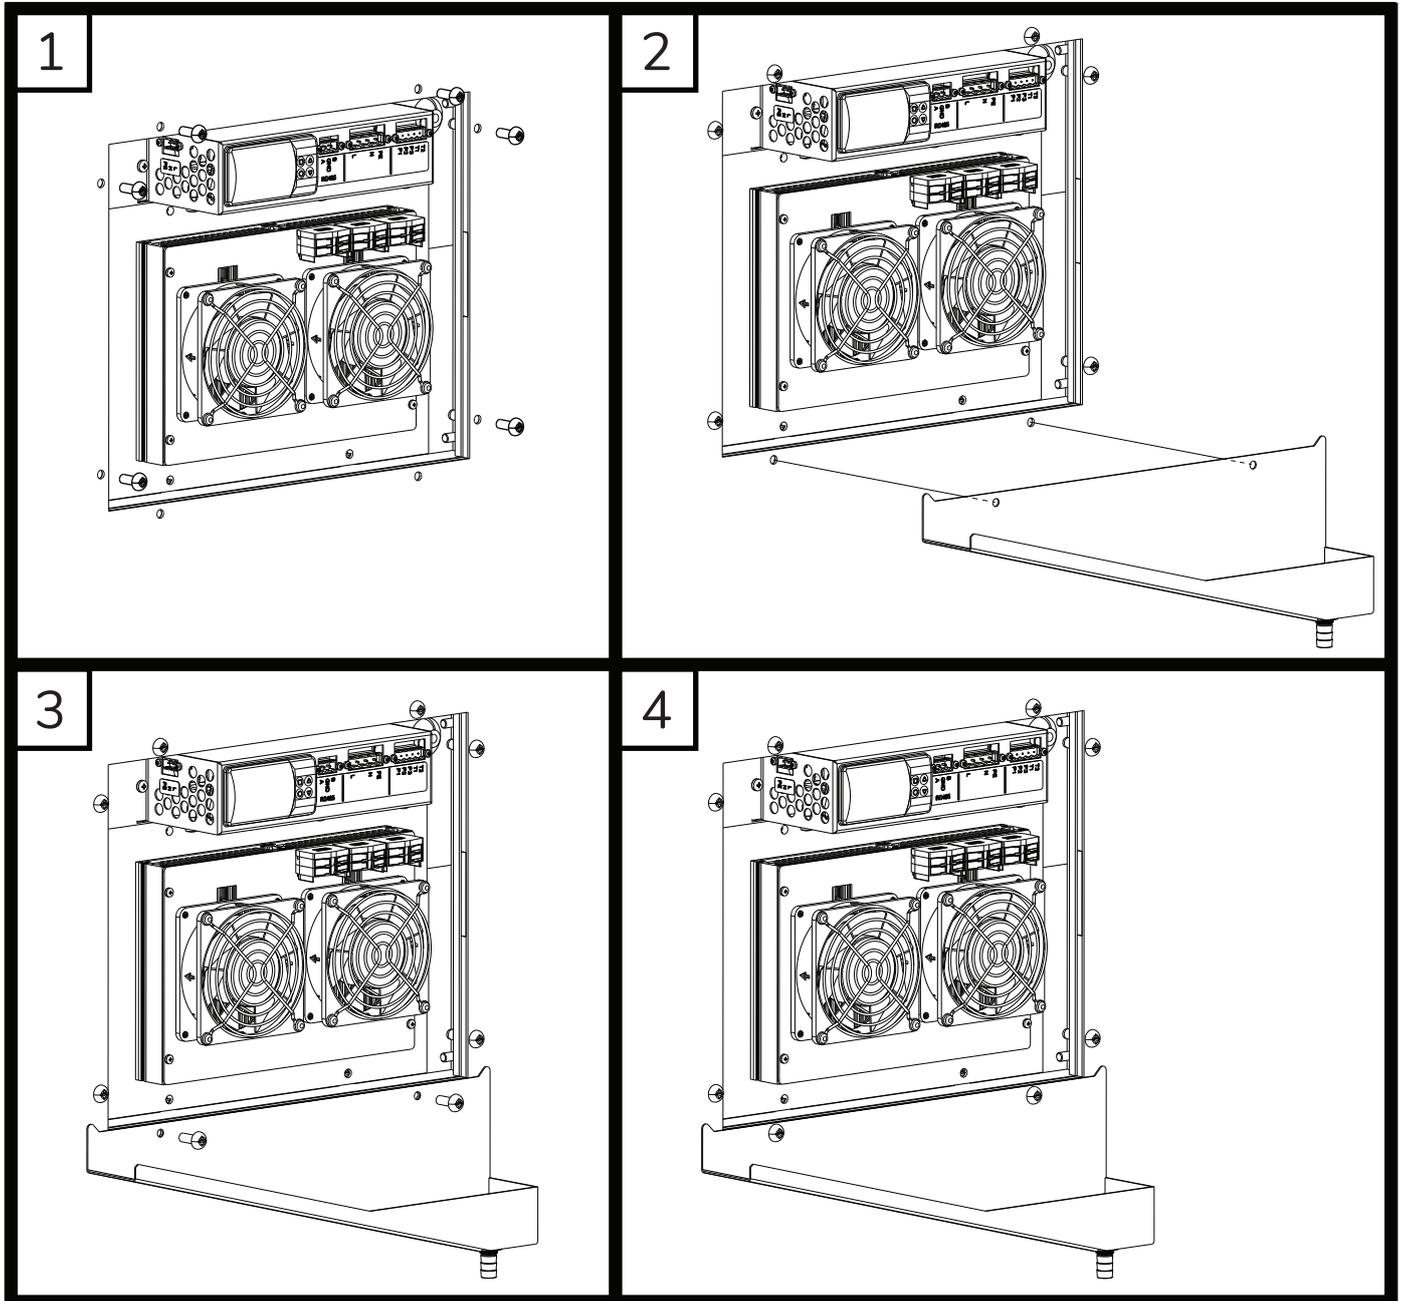

1. Mount Thermoelectric unit to the enclosure as instructed in the unit manual except for the bottom screws needed to fasten the condensate tray.
2. Once Thermoelectric unit is in place, align condensate tray.
3. Fix condensate tray using the remaining screws provided.
4. Shows correct installation.